

DODGE '02 AND NEWER 1500 (58023 KIT - OPTIONAL)



Read Installation Guide (page 10-11) before starting installation. Failure to do so could result in significant vehicle damage!



IMPORTANT NOTES FOR THIS INSTALLATION:

1. Tube spacer and 4 1/2" carriage bolt used to attach through rearward Bed Sill (Row 3).
2. **Rib neck bolts will need to be pulled through access holes in frame with supplied pull wire (see below).

3. Do not drill thru both walls of frame. Drill only thru wall of frame to which bracket is mounted.

4. It is very important that brackets in Row 2 are against rear side of Bed Sill as shown below.

5. Due to dimensional instability in Bed Sill placement with the Dodge truck, interferences could result when drilling in Row 3. Observe caution note below and double check all areas prior to drilling.

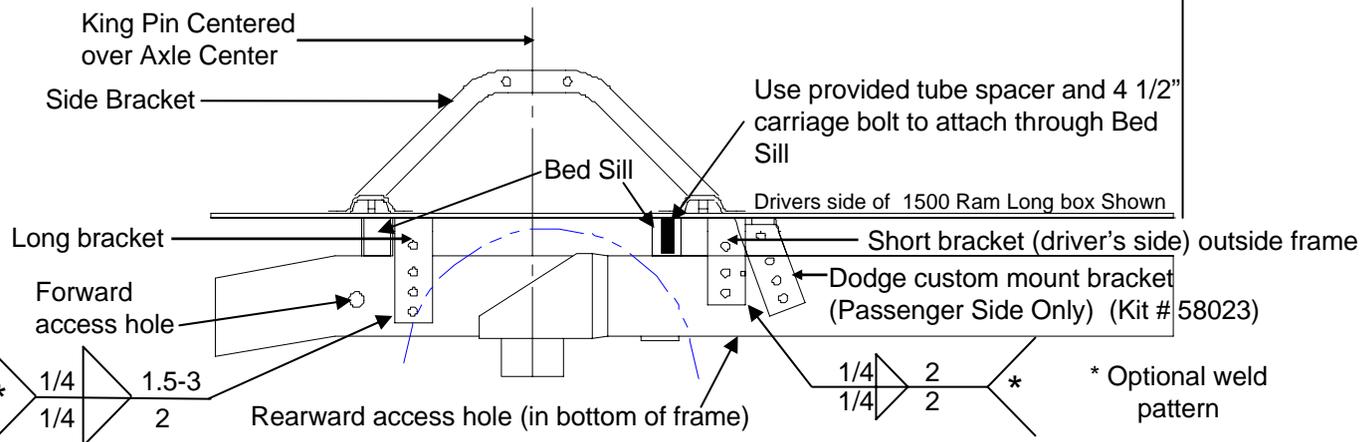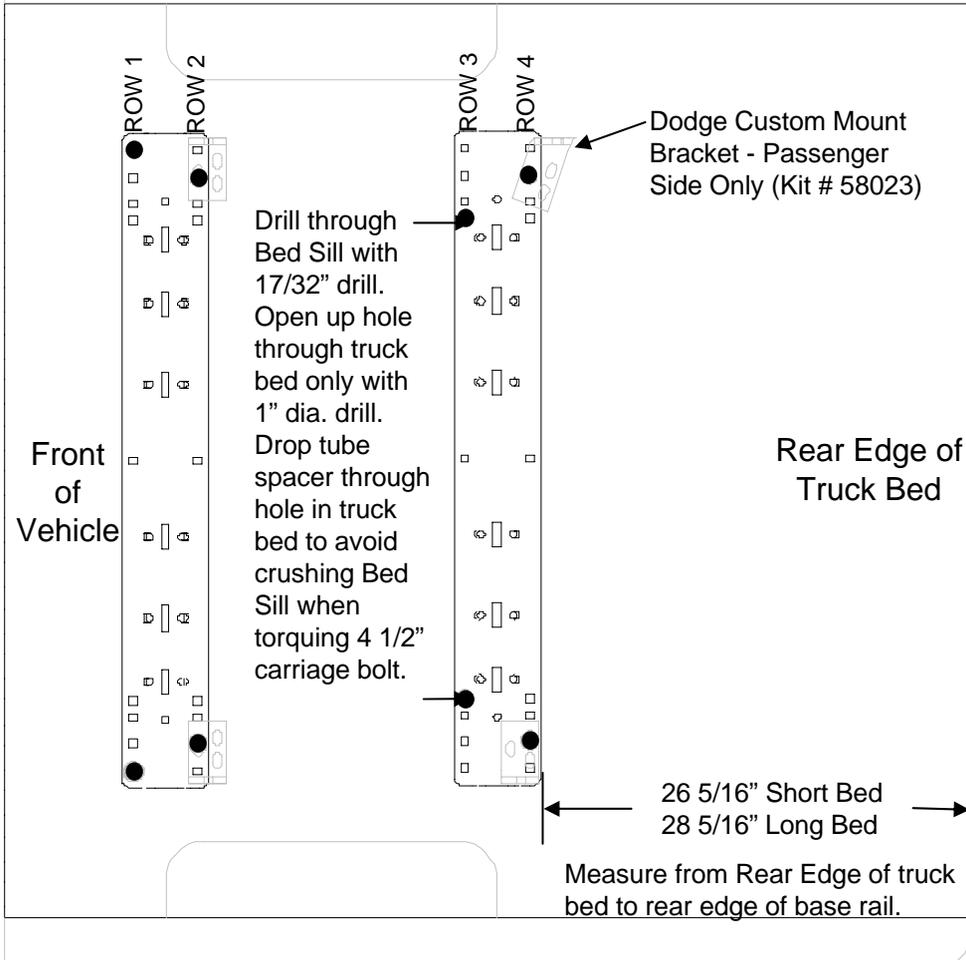

Check for obstructions before drilling. Failure to do so could result in damaged fuel or brake lines, structural members, etc. TOWING PRODUCTS does its best to communicate tow vehicle manufacturer changes; however, it is ultimately the responsibility of the installer to prevent damage due to installation.